


Contortionist™ Series Trim Installation

WARNING


This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

STEP #1

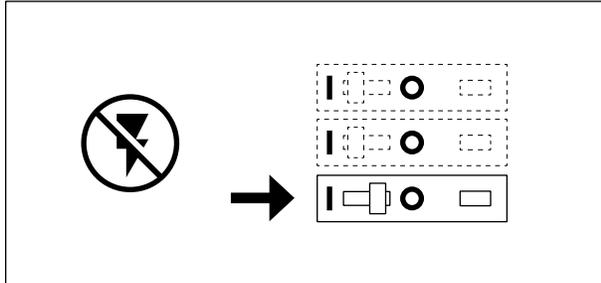


TURN OFF POWER before connecting trim. Failure to do so will cause **LED FAILURE**.

STEP #2

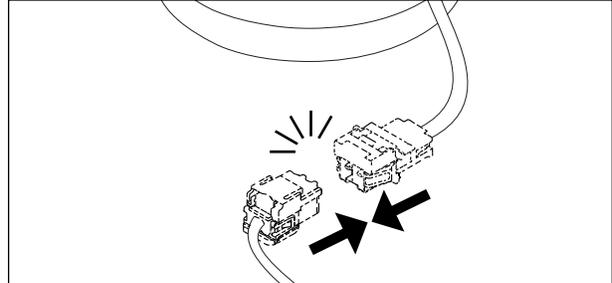


Connect the mating connectors on the light engine and housing.

STEP #3A

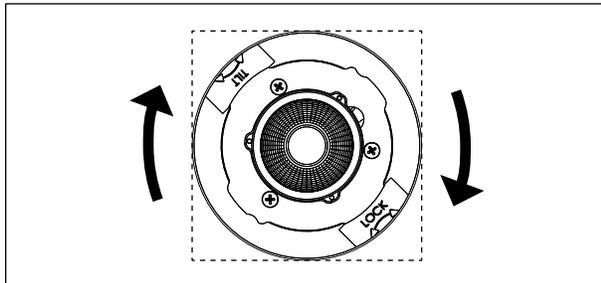


Install the light engine into the internal housing bracket. Twist the light engine 1/4 clockwise to lock into place.

STEP #3B (OPTIONAL MEDIA)

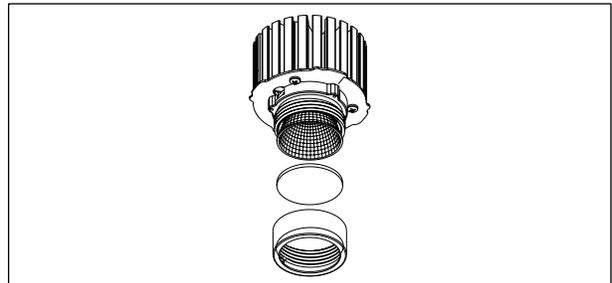


To add or remove optional media, unthread the media holder. The media sits inside the holder, and the holder accepts up to 2 media.

STEP #4A (ADJUSTMENT LOCK)

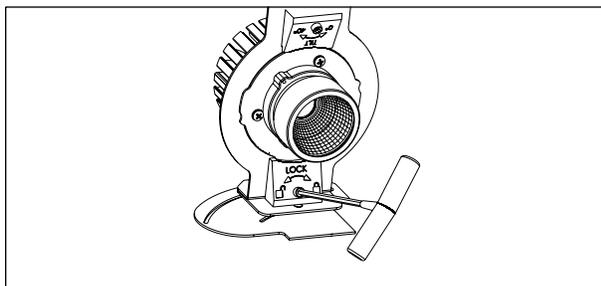

Unlock the tilting mechanism with a 1/4 counter clockwise turn using the 9/64" hex key. Once adjustment is completed (step #4b) lock the tilt mechanism with a 1/4 clockwise turn.

STEP #4B (TILT ADJUSTMENT)

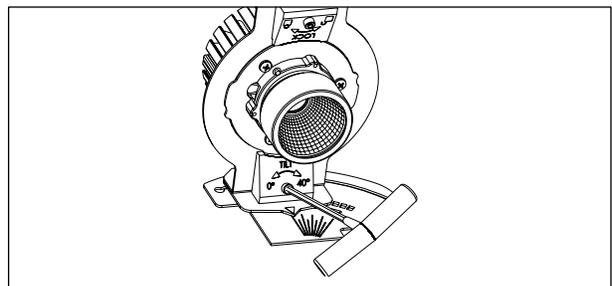


Ensure adjustment lock is disengaged (step #4a). Adjust tilt to the desired angle using the 9/64" hex key. Turn clockwise to tilt. Re-engage adjustment lock (step #4a).

Trim Installation—Contortionist • Subject to change without notice • REV 2019.01.07 • 1/2


Contortionist™ Series Trim Installation

STEP #5 (ROTATION ADJUSTMENT)

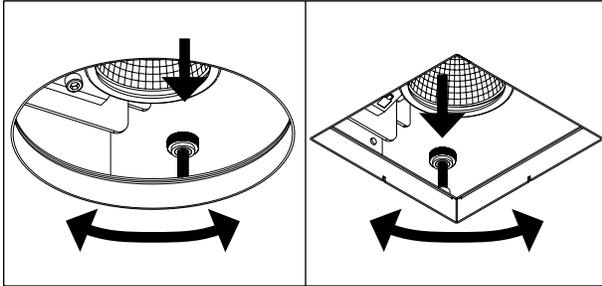


Unlock rotation screw with a counter clockwise turn. Rotate the light engine (361° rotation) to the desired angle. Lock the rotation screw with a clockwise turn.

STEP #6A (TRIMMED)

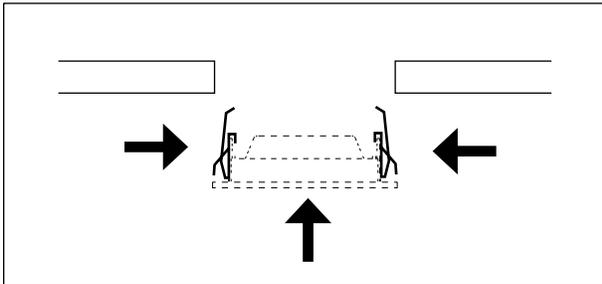


Press all the trim clips inward then slide the trim into the ceiling cutout.

STEP #6A (TRIMLESS + WOOD TRIMLESS)

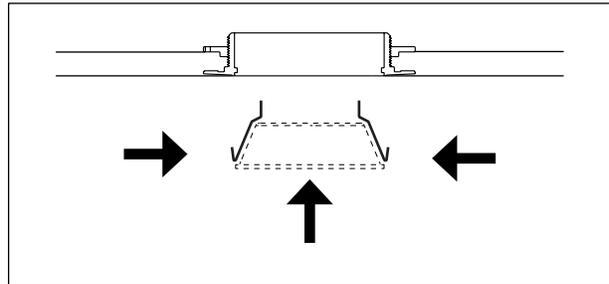


Slide the trim into the ceiling cutout.

STEP #7A (TRIMMED)

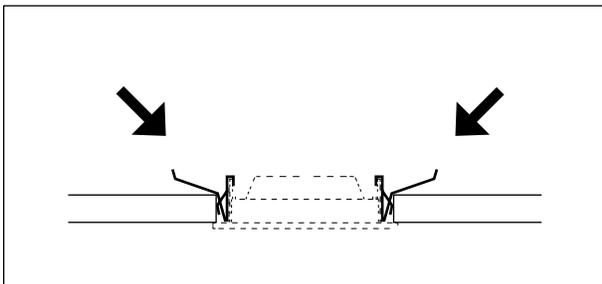

Once passed the ceiling plane, trim clips will expand to lock the trim into place.

STEP #7B (TRIMLESS + WOOD TRIMLESS)

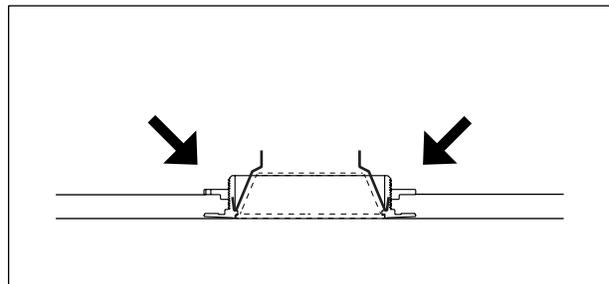

Once passed the ceiling plane, trim clips will expand to lock the trim into place.