LED PIPE

 
LED PIPE CYLINDER C3SS-3C SURFACE MOUNT INTEGRAL DRIVER (S&P DIMMING)


WARNING


This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

Risk of Fire or Electric Shock. Serious injury or death may occur. **TURN OFF POWER** prior to servicing or installing this product.

CEILING CUTOUT DIMENSIONS



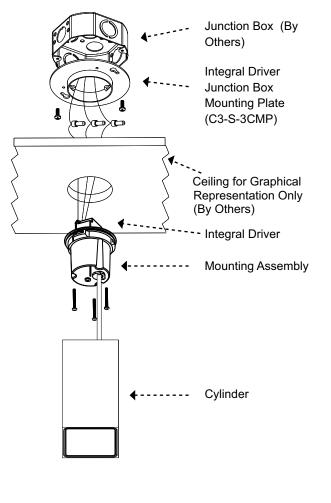


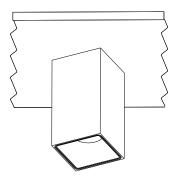







LED PIPE CYLINDER C3SS-3C SURFACE MOUNT INTEGRAL DRIVER (S&P DIMMING)

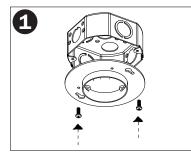


Fasten mounting plate to junction box (by others). **Must be installed prior to ceiling installation.**

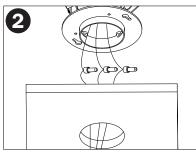

Connect driver leads to supply voltage. Ensure the correct voltage is selected. Refer to "Wiring Instructions" document.

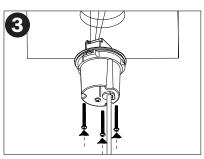

Fasten recessed canopy to junction box mounting plate with supplied fasteners. White line on bottom of recessed canopy indicates direction of square cylinder walls.

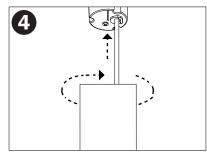

Ensure secondary leads are connected (+)(-) with lever locks. Twist cylinder clockwise to lock to the mounting assembly. If cylinder is not aligned, unlock from mounting assembly, rotate cylinder 120deg and lock again.






LED PIPE

LED PIPE CYLINDER C3SS-5C SURFACE MOUNT INTEGRAL DRIVER (S&P DIMMING)

WARNING

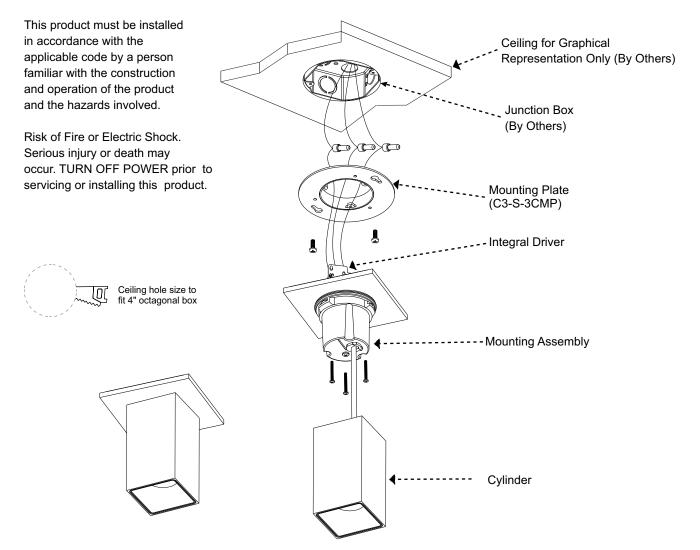


Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




LED P**I**PE


LED PIPE CYLINDER C3SS-5C SURFACE MOUNT INTEGRAL DRIVER (S&P DIMMING)

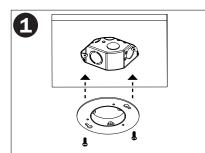


Fasten mounting plate to junction box (by others),

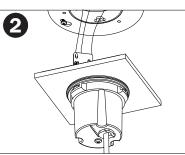

Connect driver leads to supply voltage. Ensure the correct voltage is selected. Refer to "Wiring Instructions" document.

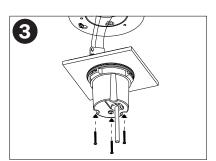

Fasten mounting assembly to the mounting plate with supplied fasteners.

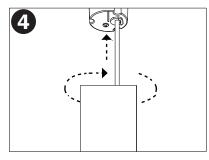

Ensure secondary leads are connected (+)(-) with lever locks. Twist cylinder clockwise to lock to the mounting assembly. If cylinder is not aligned with canopy, unlock from mounting assembly, rotate cylinder 120deg and lock again.





LED PIPE CYLINDER C3SS-5C SURFACE MOUNT (D, LH, P1 DIMMING)

Ceiling for Graphical

Representation Only


(By Others)


WARNING

This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

Risk of Fire or Electric Shock. Serious injury or death may occur. TURN OFF POWER prior to servicing or installing this product.



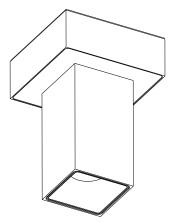


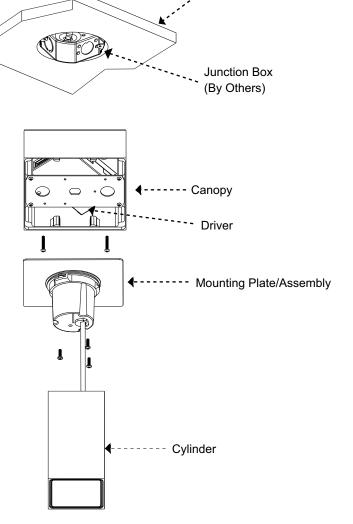

Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




LED PIPE CYLINDER C3SS-5C SURFACE MOUNT (D, LH, P1 DIMMING)

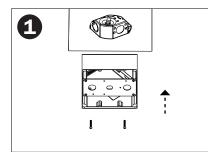


Make primary wire connections. Assemble canopy to junction box through oblong slots with machine screws.

For junction box with parallel screw mounting, remove driver and use undercut screws (supplied) in slots with chamfer. Re-attach driver to plate.

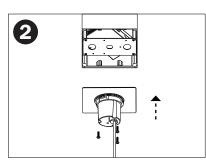


Fasten mounting plate assembly to canopy. If wet location press fit required.

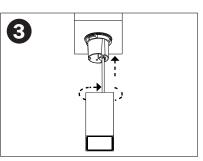

Ensure secondary leads are connected (+)(-) with lever locks. Twist cylinder clockwise to lock to the mounting assembly. If cylinder is not aligned with canopy, unlock from mounting assembly, rotate cylinder 120deg and lock again.





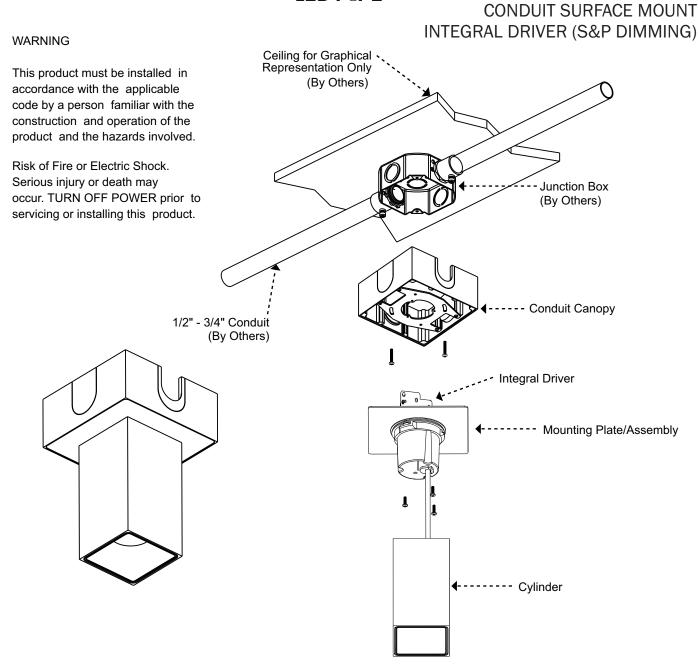


Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23





LED PIPE CYLINDER


C3SS-CM

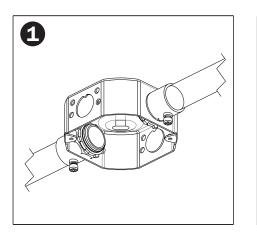

Assemble conduit 1/2 or 3/4 (by


others) to 4" octagonal junction

1.5"-2.13" (by others).

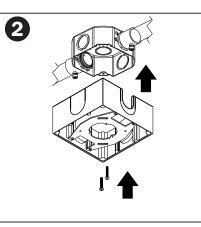


Assemble conduit canopy to junction box through oblong slots with provided machine screws (8-32 x 1.5").

LED PIPE CYLINDER C3SS-CM CONDUIT SURFACE MOUNT **INTEGRAL DRIVER (S&P DIMMING)**

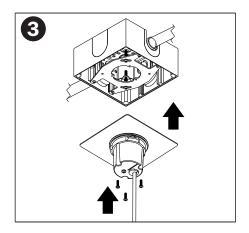


Make supply connections. Fasten Mounting plate assembly to conduit plate inside of conduit canopy with supplied screws.

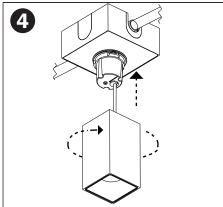

Ensure secondary leads are connected (+)(-) with lever locks. Twist cylinder clockwise to lock to the mounting assembly. If cylinder is not aligned with canopy, unlock from mounting assembly, rotate cylinder 120deg and lock again.

Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23

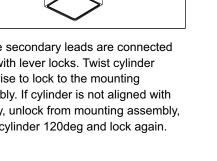


info@lightheadedlighting.com . www.lightheadedlighting.com P. 604.464.5644 T. 1.800.464.9544 F. 604.464.0888





LED PIPE

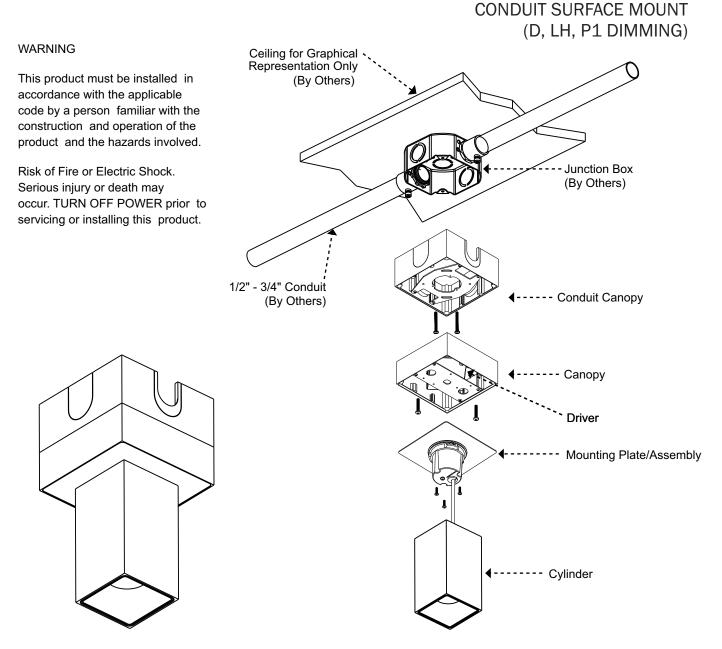

Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




LIGHTHEADED


LED PIPE CYLINDER

C3SS-CM


LED PIPE CYLINDER C3SS-CM CONDUIT SURFACE MOUNT (D, LH, P1 DIMMING)

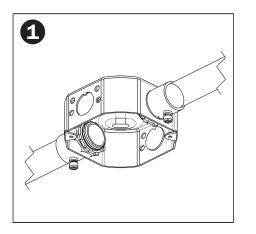


Assemble conduit 1/2 or 3/4 (by others) to 4" octagonal junction 1.5"-2.13" (by others).

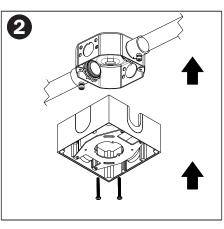


Assemble conduit canopy to junction box through oblong slots with machine screws.

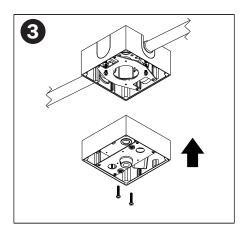

Make supplied connections. Check with wiring diagrams. Place canopy onto conduit canopy and fasten screws through key holes on the canopy's top plate into conduit canopy plate.

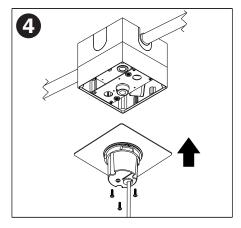

Fasten Mounting plate assembly to canopy bottom plate with supplied screws.

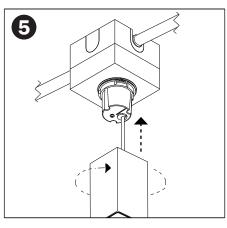

Ensure secondary leads are connected (+)(-) with lever locks. Twist cylinder clockwise to lock to the mounting assembly. If cylinder is not aligned with canopy, unlock from mounting assembly, rotate cylinder 120deg and lock again.

Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




info@lightheadedlighting.com . www.lightheadedlighting.com P. 604.464.5644 T. 1.800.464.9544 F. 604.464.0888



LED PIPE

LED PIPE CYLINDER C3SAS-3C SURFACE MOUNT ADJ INTEGRAL DRIVER (S&P DIMMING)

WARNING

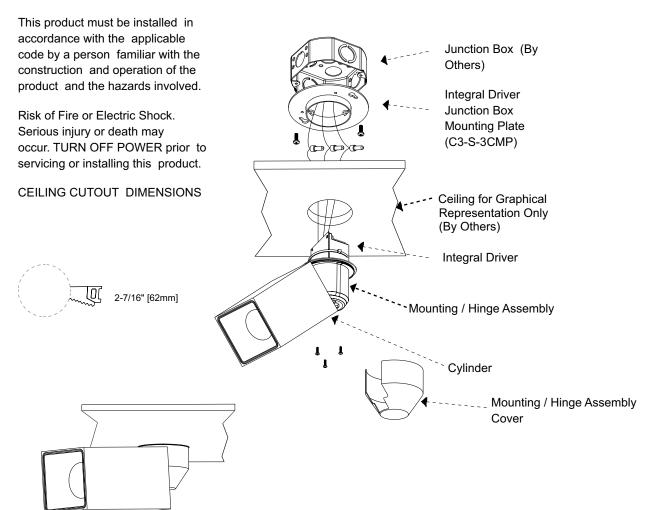







LED PIPE


LED PIPE CYLINDER C3SAS-3C SURFACE MOUNT ADJ INTEGRAL DRIVER (S&P DIMMING)

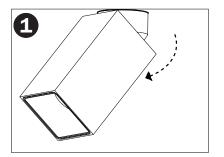

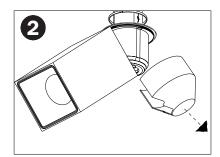


See C3SS-3C Junction box mounting (Step 1 & 2). Tilt cylinder to expose mounting/assembly cover.

Pull to remove mounting assembly cover.

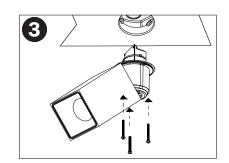

Fasten mounting / hinge assembly to the integral driver junction box mounting plate with supplied fasteners.

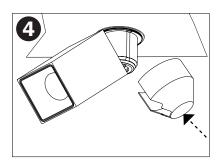

Reattach and ensure mounting/ hinge assembly cover is fully seated and secured in place.




LED PIPE

C3SAS-5C SURFACE MOUNT ADJ INTEGRAL DRIVER (S&P DIMMING)

LED PIPE CYLINDER

WARNING

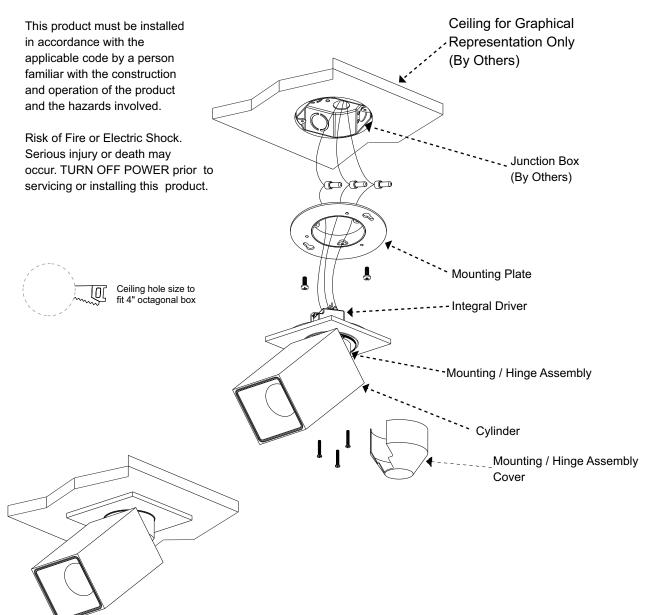


Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




LED PIPE


LED PIPE CYLINDER C3SAS-5C SURFACE MOUNT ADJ INTEGRAL DRIVER (S&P DIMMING)

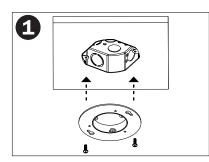

Fasten mounting plate to junction box (by others),

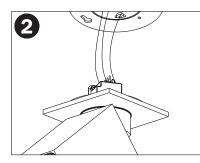

Connect driver leads to supply voltage. Ensure the correct voltage is selected. Refer to "Wiring Instructions" document.

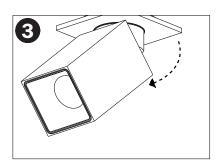

Tilt cylinder to expose mounting/ hinge assembly cover. See C3SAS-3C (Steps 2-4) for remaining steps.






LED PIPE

LED PIPE CYLINDER C3SAS-5C SURFACE MOUNT ADJ (D, LH, P1 DIMMING)

WARNING

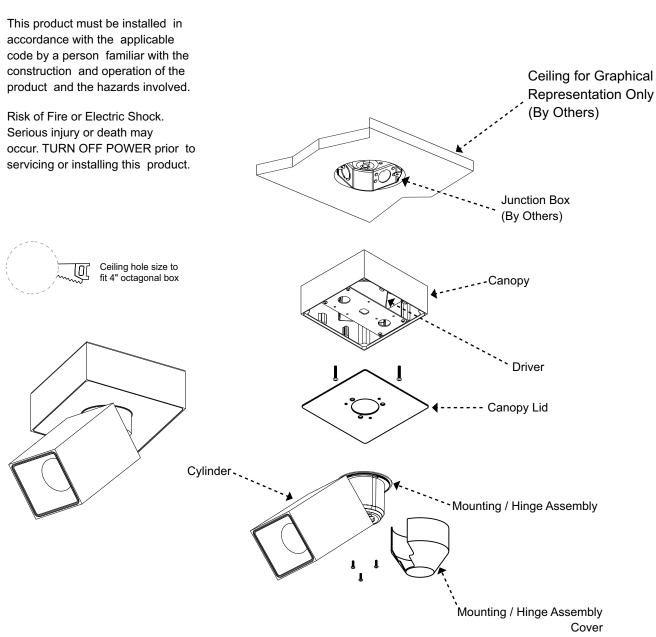


Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




LED P**I**PE

LED PIPE CYLINDER C3SAS-5C SURFACE MOUNT ADJ (D, LH, P1 DIMMING)

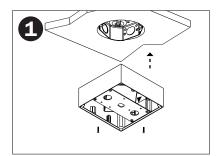


Make primary wire connections. Assemble canopy to junction box through oblong slots with machine screws.

For junction box with parallel screw mounting, remove driver and use undercut screws (supplied) in slots with chamfer. Re-attach driver to plate.

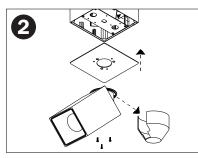

Place canopy lid inside of canopy. Align three larger size mounting holes with tapped holes on inside plate. Pull to remove mounting assembly cover. Fasten mounting/hinge assembly and cylinder with supplied fasteners.

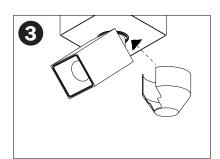


Re-attach and ensure mounting/hinge assembly cover is fully seated and secured in place.





LED PIPE CYLINDER C3SAS-CM CONDUIT SURFACE MOUNT ADJ (P&S DIMMING)

WARNING

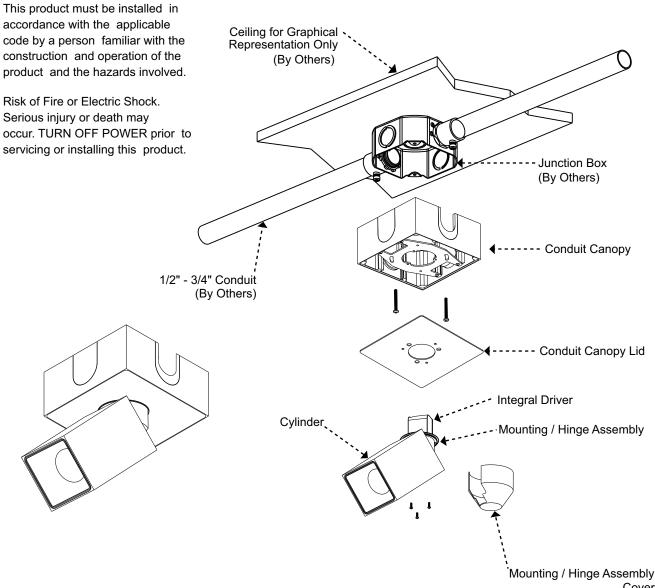

Cover

Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




info@lightheadedlighting.com . www.lightheadedlighting.com P. 604.464.5644 T. 1.800.464.9544 F. 604.464.0888

LIGHTHEADED[™]


LED PIPE

LED PIPE CYLINDER C3SAS-CM CONDUIT SURFACE MOUNT ADJ (P&S DIMMING)

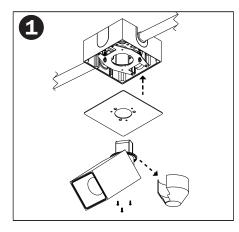

See C3SS-CM for conduit canopy mounting instructions (Steps 1 &

2). Make supply connections. Place canopy lid inside of canopy. Align three larger size mounting holes with tapped holes of conduit plate. Pull to remove mounting assembly cover. Fasten mounting/hinge assembly and cylinder with supplied fasteners.

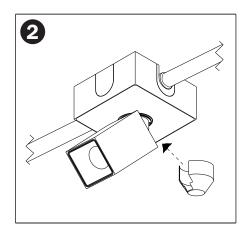

Re-attach and ensure mounting/hinge assembly cover is fully seated and secured in place.






LED PIPE

LED PIPE CYLINDER C3SAS-CM CONDUIT SURFACE MOUNT ADJ (D, LH, P1 DIMMING)

WARNING

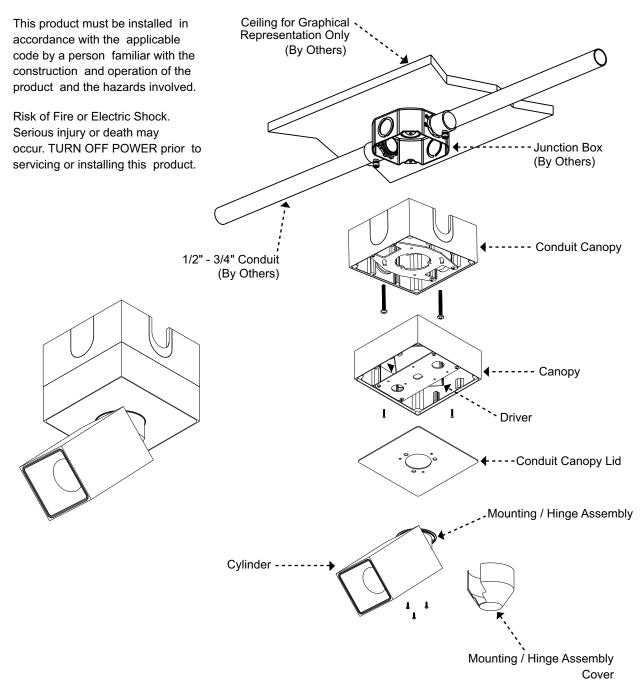


Led Pipe Cylinder-C3SS-Installation • Subject to change without notice • REV 2025.01.23




LED P**I**PE

LED PIPE CYLINDER C3SAS-CM CONDUIT SURFACE MOUNT ADJ (D, LH, P1 DIMMING)

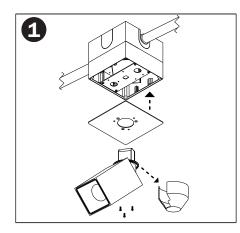

See C3SS-CM for conduit canopy instructions (Steps 1-3).


Place canopy lid inside of canopy. Align three larger size mounting holes with tapped holes of conduit retainer ring. Pull to remove mounting assembly cover. Fasten mounting/hinge assembly and cylinder with supplied fasteners.

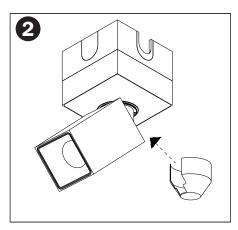

Re-attach and ensure mounting/hinge assembly cover is fully seated and secured in place.




LED PIPE CYLINDER LENS SERVICE

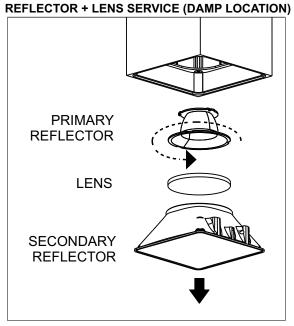

To service or change the reflector lens, rotate the secondary reflector 45° counter clockwise to release. Then rotate the primary reflector 45° counter clock wise to release.

REFLECTOR SERVICE (WET LOCATION)

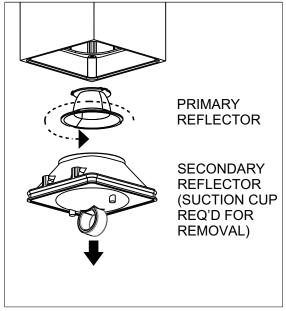

To service or change the reflector. Press suction cup onto glass and pull. Hold onto cylinder while pulling if possible. Contact factory for suction cup procurement. Rotate the primary reflector 45° counter clockwise to release.

LIGHTHEADED



