


Housing Installation

WARNING


This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

Risk of Fire or Electric Shock. Serious injury or death may occur. **TURN OFF POWER** prior to servicing or installing this product.


CEILING CUTOUT-TRIMMED & TRIMLESS




CEILING CUTOUT-WOOD TRIMLESS

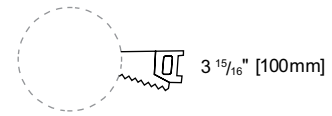

CEILING CUTOUT-TRIMMED, TRIMLESS & WOOD TRIMLESS

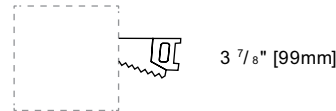


SETUP

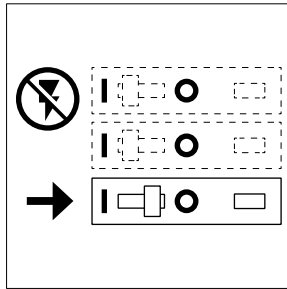


TURN OFF POWER .
Failure to do so will
cause **LED FAILURE** .

STEP #1

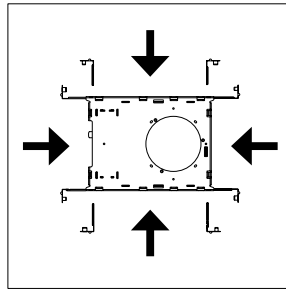


Insert hanger bars into the base plate. Housings may allow for multi-directional bars, set on either the sides and ends.

STEP #2

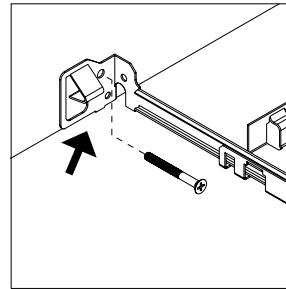


Align bottom edge of hanging bars with joist and hammer in tabs. Nail or screw hanging bars into place.

STEP #3

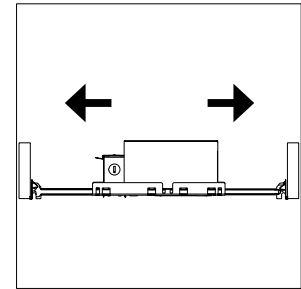


Position trim hole to desired location by sliding housing.

STEP #4

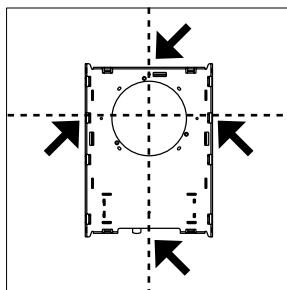


Use centering holes on either side of housing base plate to line up a row of fixtures.

STEP #5A

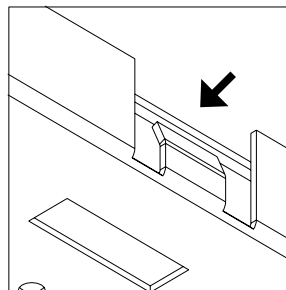


For directional hanger bars set on the sides of the housing, bend the tab on the side to set the housing into place.

STEP #5B

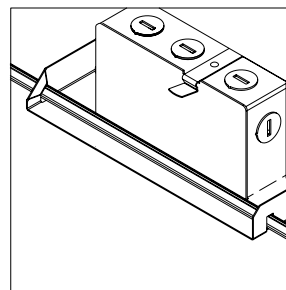

For multi-directional hanger bars set on the ends, bend the corners of the housing plate into hanger bar to set the housing into place.

STEP #6

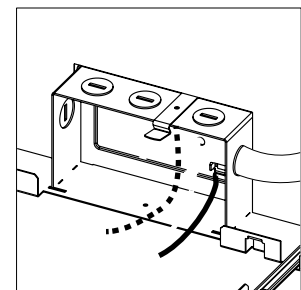


Remove knock out(s) and make appropriate electrical connection(s). **Refer to dimming instructions.**

Housing Installation • Subject to change without notice • REV 2022.03.17

Housing Installation

STEP #7

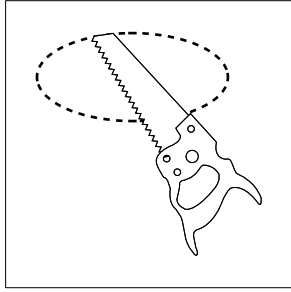


Cut ceiling opening. Refer to ceiling cutout dimensions above.

STEP #8




For wood trimless ceilings, please refer to the "Wood Trimless" section below.

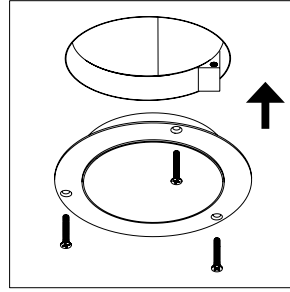


Cut notches to expose mounting holes on housing baseplate and install trimless frame with screws provided.

STEP #9

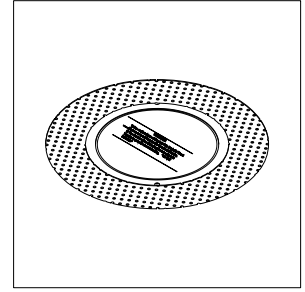


Apply factory supplied fibre mesh over trim collar edge. Insert cardboard cover into opening.

STEP #10

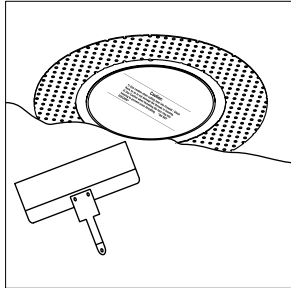


Apply thin coat of plaster mud onto trim collar and fibre mesh, using collar lip as the height guide. Feather mud 12" from edge.

STEP #11

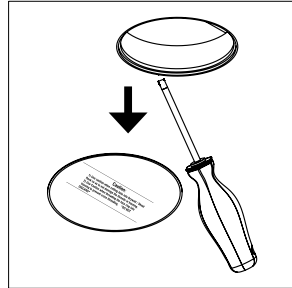


Remove cardboard cover. Clean inside lip of the trim collar of any excess drywall mud.

STEP #12

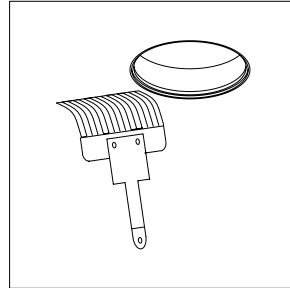


Paint ceiling. Excess paint on inside edge of ring may restrict the trim from sitting flat.

STEP #8

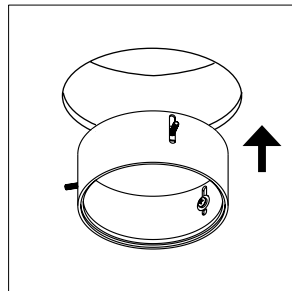


Insert transition ring and fasten with machine screws and washers.

STEP #9

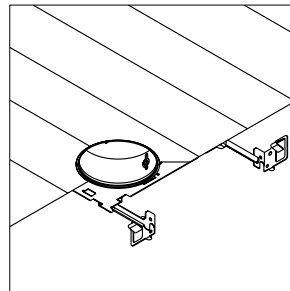

Install the wood ceiling.

STEP #10

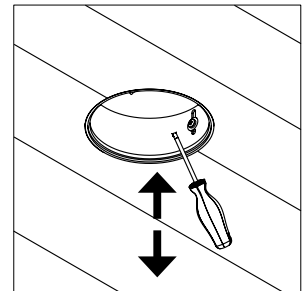

Adjust transition ring height by loosening the 3 machine screws to make ring flush.

Housing Installation • Subject to change without notice • REV 2022.03.17