


Standard Series Trim Installation

WARNING


This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

STEP #1

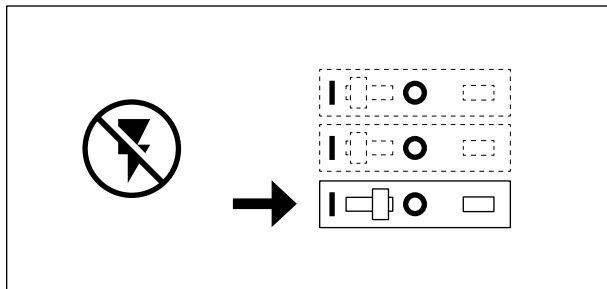


TURN OFF POWER before connecting trim. Failure to do so will cause **LED FAILURE**.

STEP #2

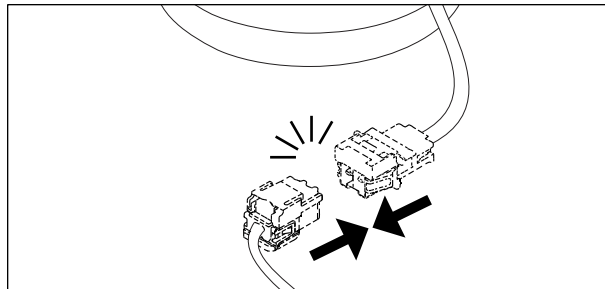


Connect the mating connectors on the trim and housing.

STEP #3A (TRIMMED)

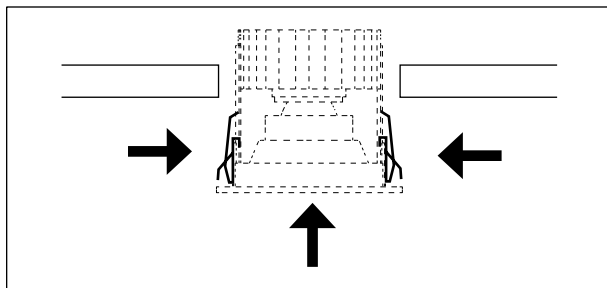


Press all the trim clips inward then slide the trim into the ceiling cutout.

STEP #3B (TRIMLESS + WOOD TRIMLESS)

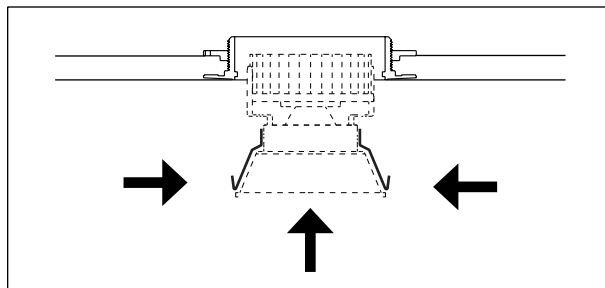


Slide the trim into the ceiling cutout.

STEP #4A (TRIMMED)

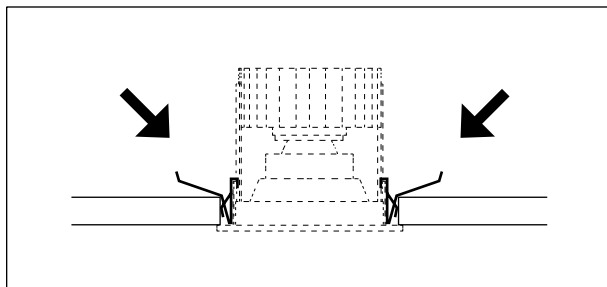

Once passed the ceiling plane, trim clips will expand to lock the trim into place.

STEP #4B (TRIMLESS + WOOD TRIMLESS)

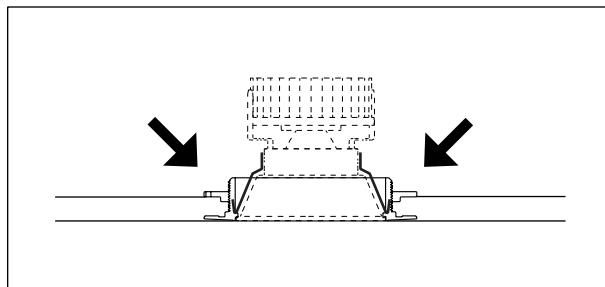

Once passed the ceiling plane, trim clips will expand to lock the trim into place.