


Install Guide

T3 TRIM/TRIMLESS AND DRIVER INSTALL

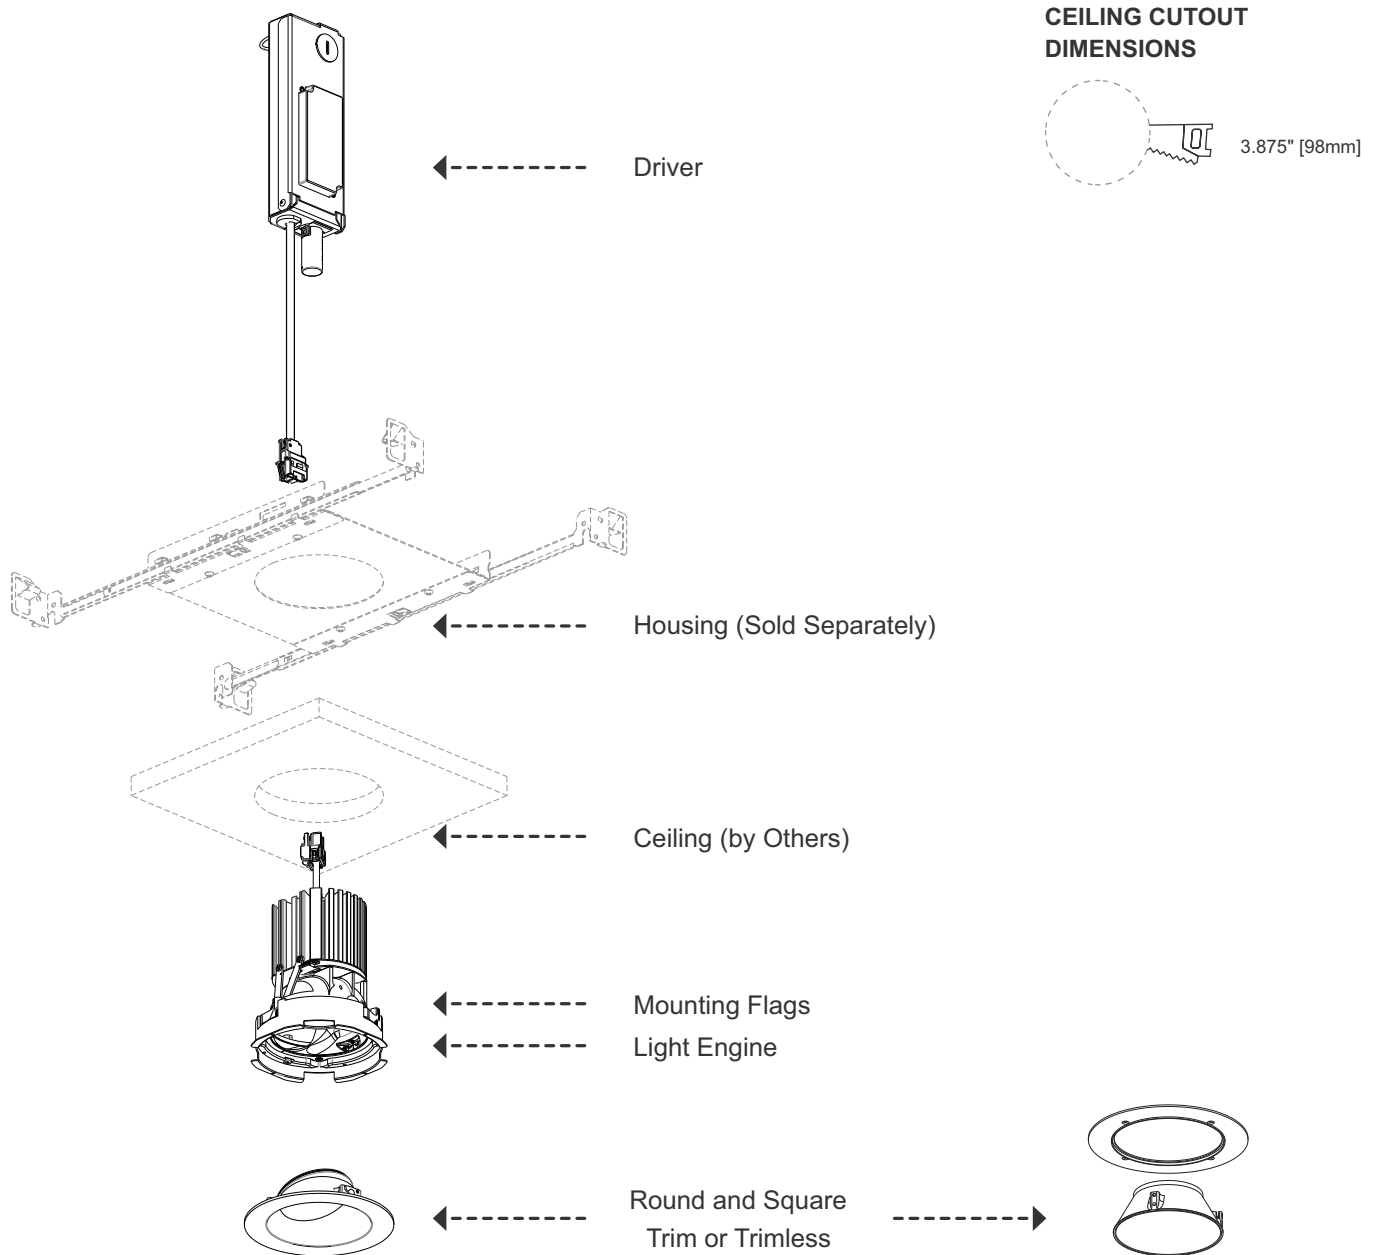

T3 - Opus • Subject to change without notice • REV 2021.09.13


Install Guide

T3

TRIM/TRIMLESS AND DRIVER INSTALL


This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved. Read all of these instructions before installing.

WARNING: Disconnect power prior to servicing or installing.

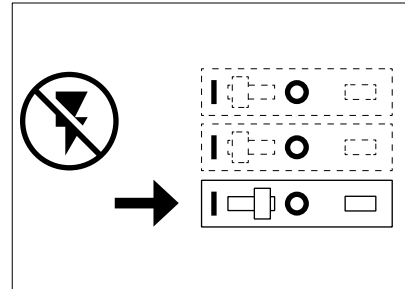


STEP 1

TURN OFF POWER before connecting any wire, leads or connectors.

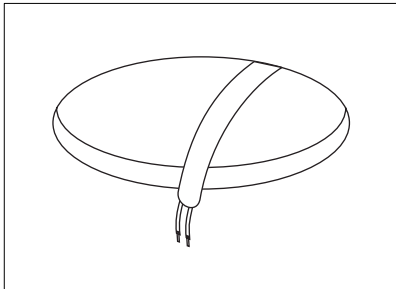


STEP 2

Pull electrical wire through the ceiling cutout. For hole cutout refer to "Housing Install".

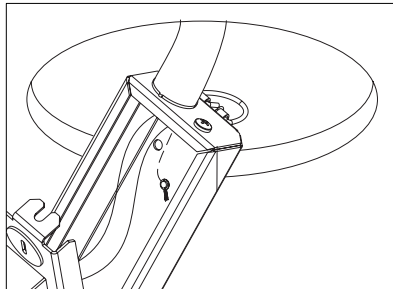


STEP 3

Connect driver leads to supply voltage. Ensure the correct voltage is selected. Refer to "Wiring Instructions".

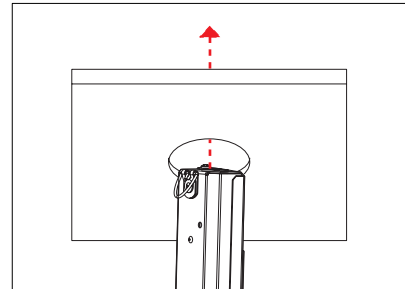


STEP 4

Push driver through ceiling opening and secure in place as required. Ensure the connector is accessible after installation.

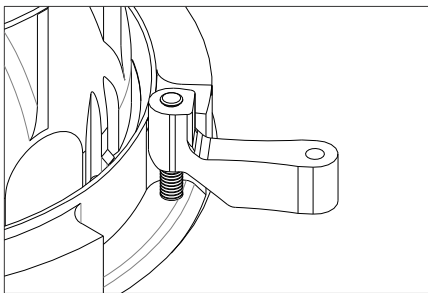


STEP 5

Set up the proper mounting flag position based on the ceiling thickness.

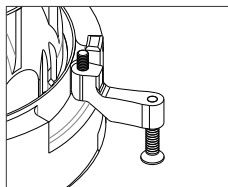


STEP 5 - A

Ceiling thickness:
0" to 0.5"
Flag Position:
down
Screw:
#6-32 3/4" by others

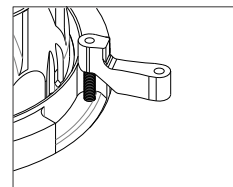


STEP 5 - B

Ceiling thickness:
0.5" to 0.75"
As shipped

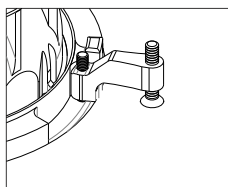

STEP 5 - C

Ceiling thickness:
0.75" to 1"
Flag Position:
up
Screw:
#6-32 3/4" by others

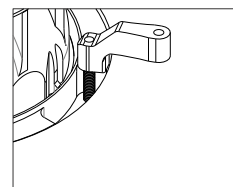

STEP 5 - D


Ceiling thickness:
1" to 1.250"
Flag Position:
up
Screw:
not required

T3 - Opus • Subject to change without notice • REV 2021.09.13

Install Guide


T3

TRIM/TRIMLESS AND DRIVER INSTALL

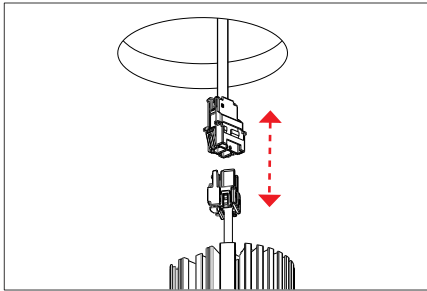


STEP 6

TURN OFF POWER. Connect the matting connectors on the light engine to driver. Failure to do will cause *LED Failure*.

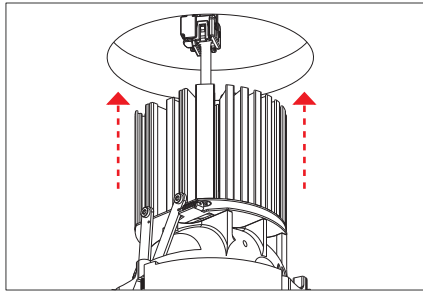


STEP 7

Fit light engine through hole in the ceiling.

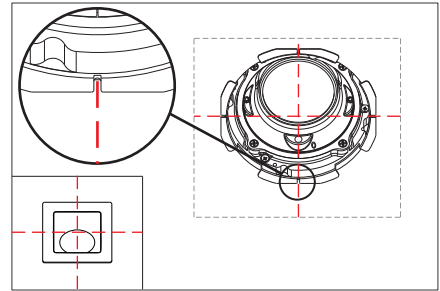


STEP 8

Align fixture using gunsight notches. Square trim gunsight are perpendicular to the desired flat side. Image on bottom left for reference.

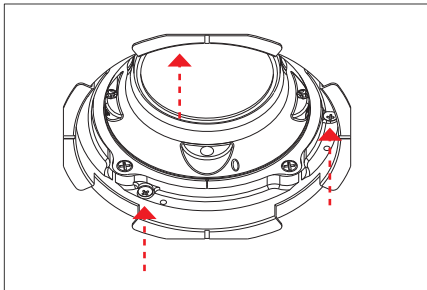


STEP 9

Fasten light engine to the ceiling tightening three screws provided.

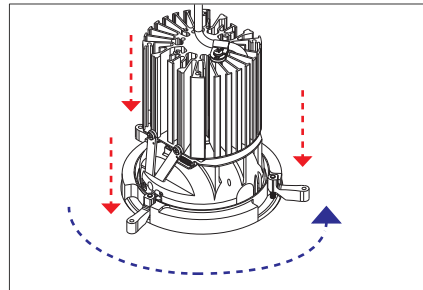


STEP 10

Three mounting flags secure light engine to the ceiling. **DO NOT OVERTIGHTEN.**

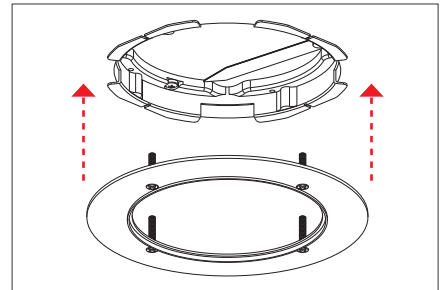


STEP 11 (Trimless only)

Install trimless frame with screws provided.

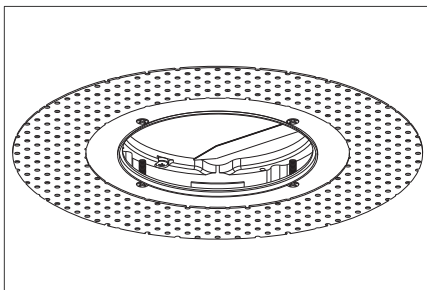


STEP 12 (Trimless only)

Apply factory supplied fibre mesh over trim collar edge.

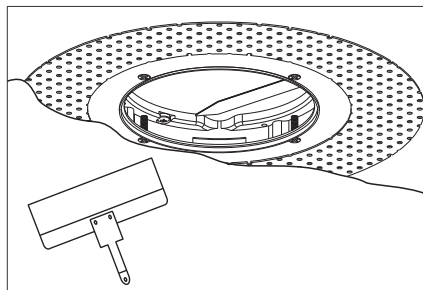

STEP 13 (Trimless only)

Apply thin coat of plaster mud onto trim collar and fibre mesh, using collar lip as the height guide. Feather mud 12" from edge

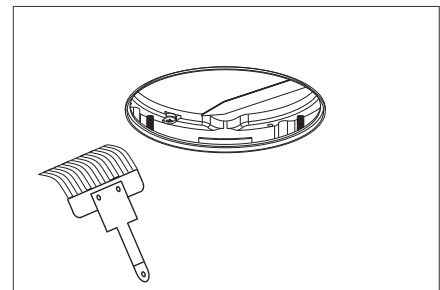


STEP 14 (Trimless only)

Paint ceiling. Excess paint on inside edge of ring may restrict the trim from sitting flat.


T3 - Opus • Subject to change without notice • REV 2021.09.13

TRIM/TRIMLESS AND DRIVER INSTALL

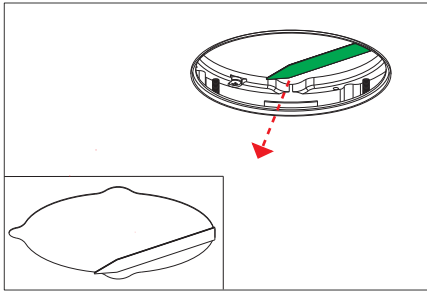


STEP 15

Remove dust cover pulling the green tab.
Clean inside lip of the trim collar of any excess drywall mud.

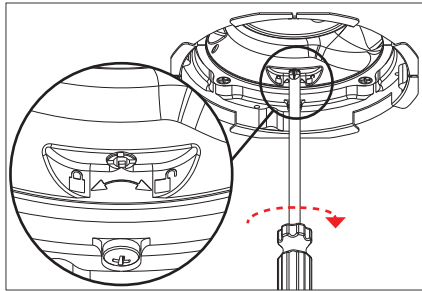


STEP 16

Using flathead, philips or 2.5mm hex key
Unlock with a 1/4 turn counter clockwise.
Rotate light engine (361° rotation) to desired angle.

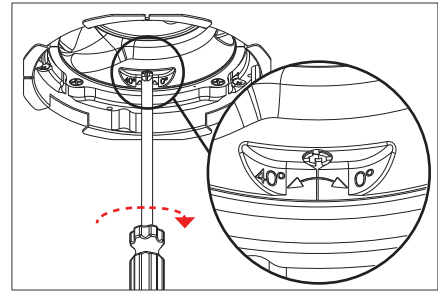


STEP 17

Using flathead, philips or 2.5mm hex key
Adjust tilt to desired angle. Turn clockwise to tilt.

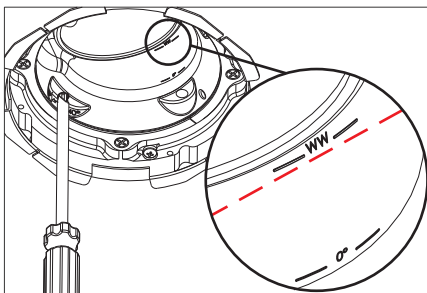


STEP 18 (Wall Wash only)

Tilt light engine till reflector/media expose and get flush with the (--WW--) mark.

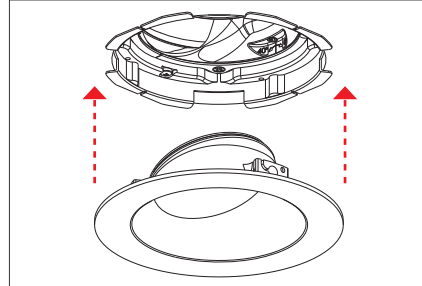

STEP 19

Snap trim in place. A click sound indicate it is secured in place.

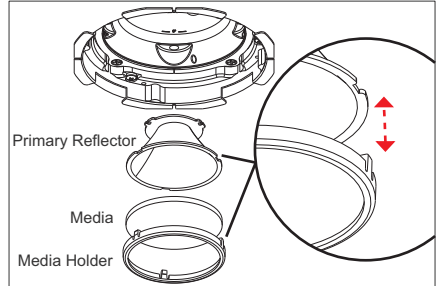

STEP 20

To remove media, rotate media holder until the tab align with reflector notch and the media drops.
To install simply snap media holder to reflector.

Wiring Instructions

T3


WARNING

TURN OFF POWER before connecting LED product. Failure to do so will cause **IMMEDIATE LED FAILURE**.


TRIM/TRIMLESS AND DRIVER INSTALL

This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

LUTRON ECOSYSTEM (LH) DIMMING

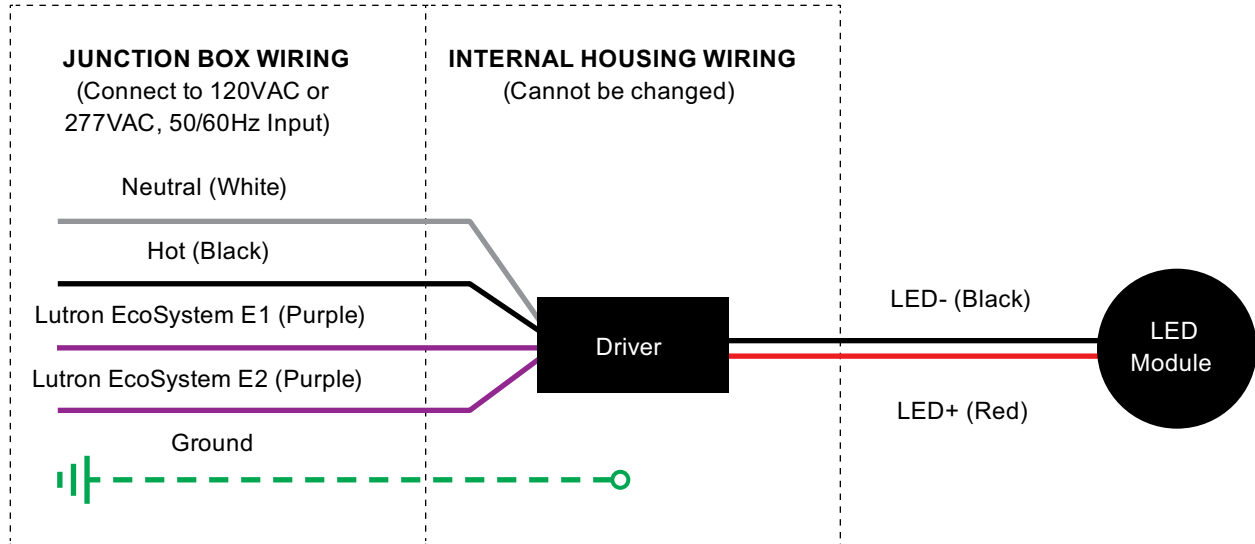

LUTRON PHASE (LE) DIMMING

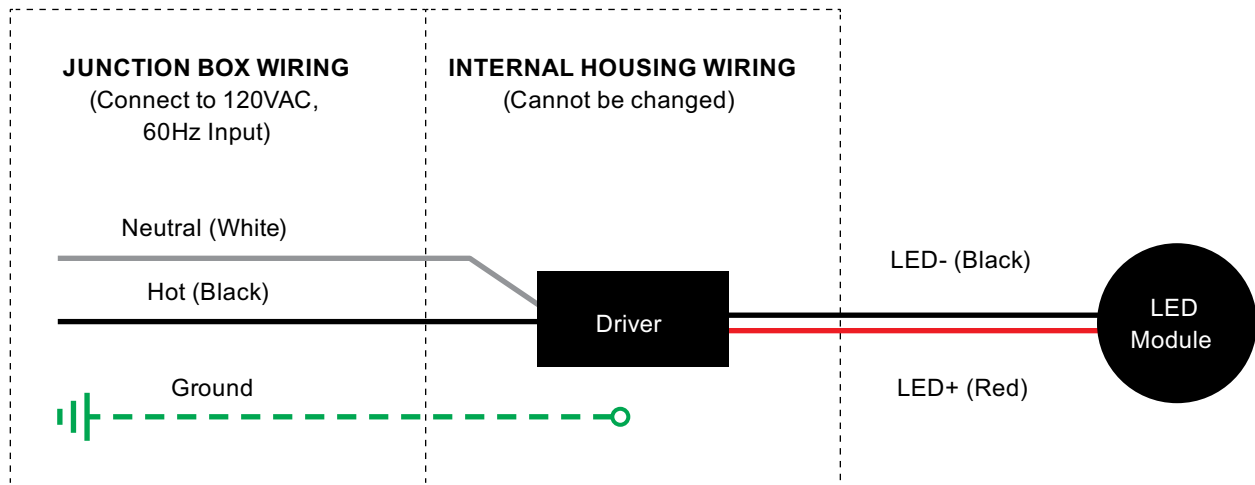

T3 - Opus • Subject to change without notice • REV 2021.09.13

Wiring Instructions

T3


WARNING

TURN OFF POWER before connecting LED product. Failure to do so will cause **IMMEDIATE LED FAILURE**.


TRIM/TRIMLESS AND DRIVER INSTALL

This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

0–10V (P) & 0–10V (P1) DIMMING

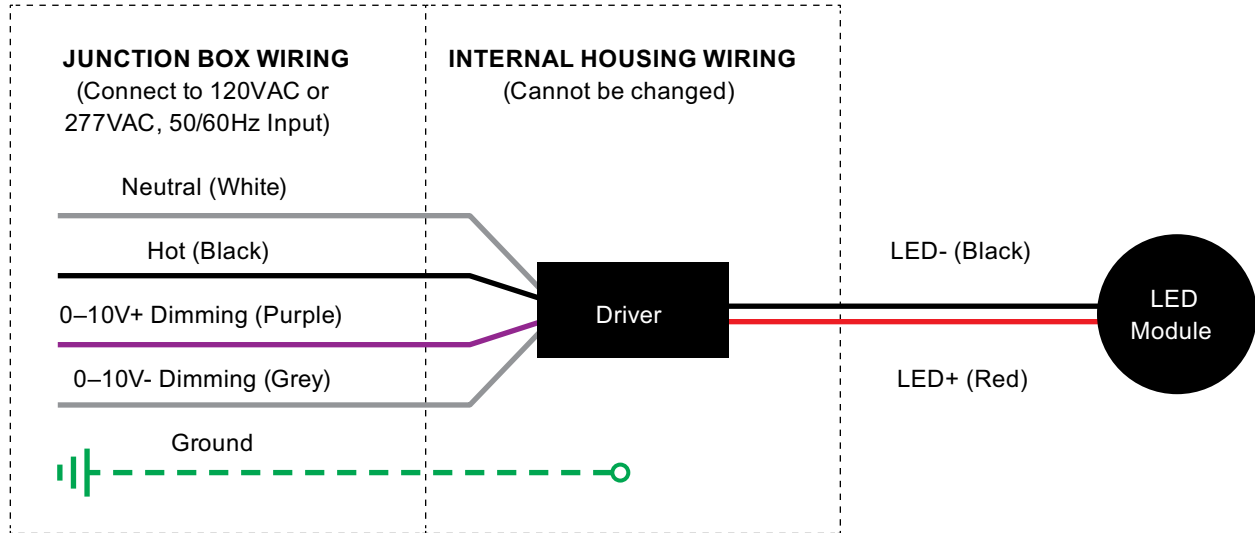

PHASE (S) DIMMING

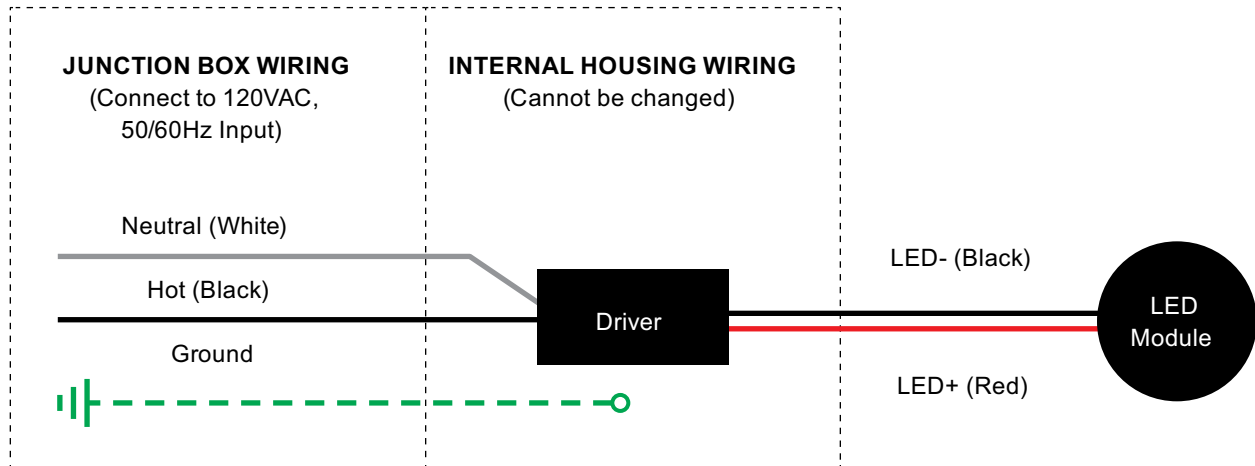

T3 - Opus • Subject to change without notice • REV 2021.09.13

Wiring Instructions

T3


WARNING

TURN OFF POWER before connecting LED product. Failure to do so will cause **IMMEDIATE LED FAILURE**.

TRIM/TRIMLESS AND DRIVER INSTALL

This product must be installed in accordance with the applicable code by a person familiar with the construction and operation of the product and the hazards involved.

DALI (D) DIMMING

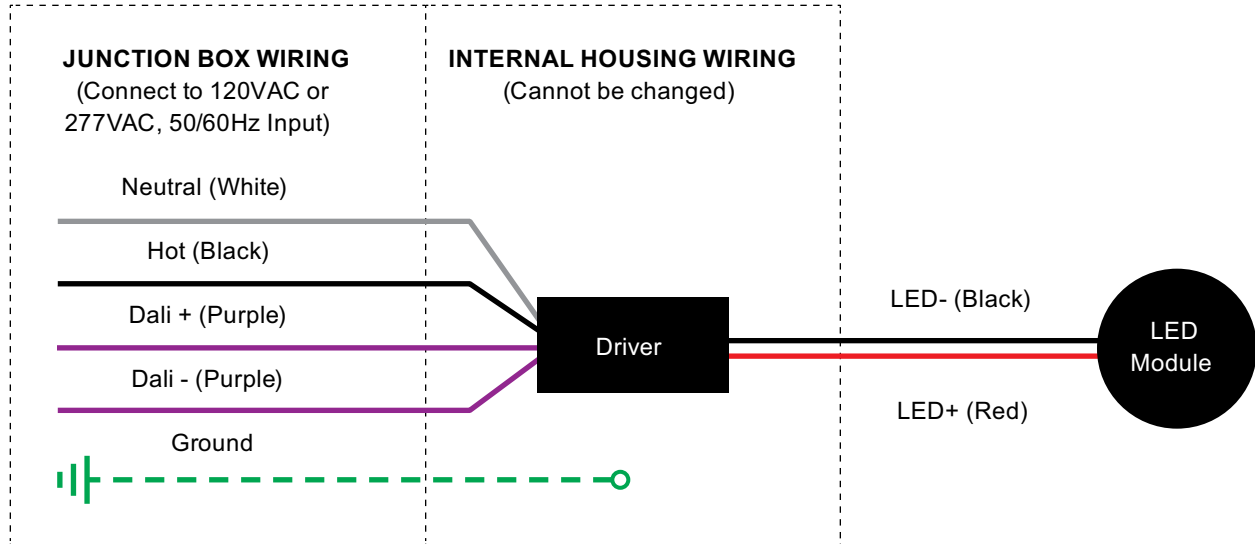

T3 - Opus • Subject to change without notice • REV 2021.09.13